



Making Lever Cam Clamps By Hand.

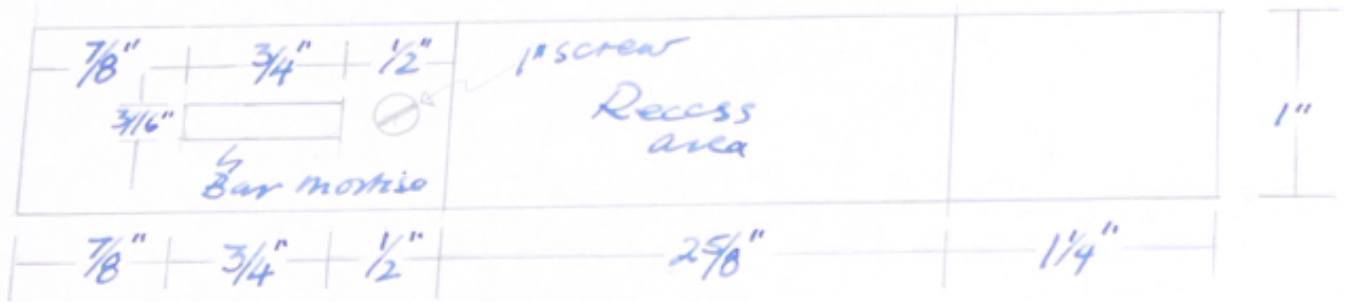

Size holes for split roll pins to pin size used.

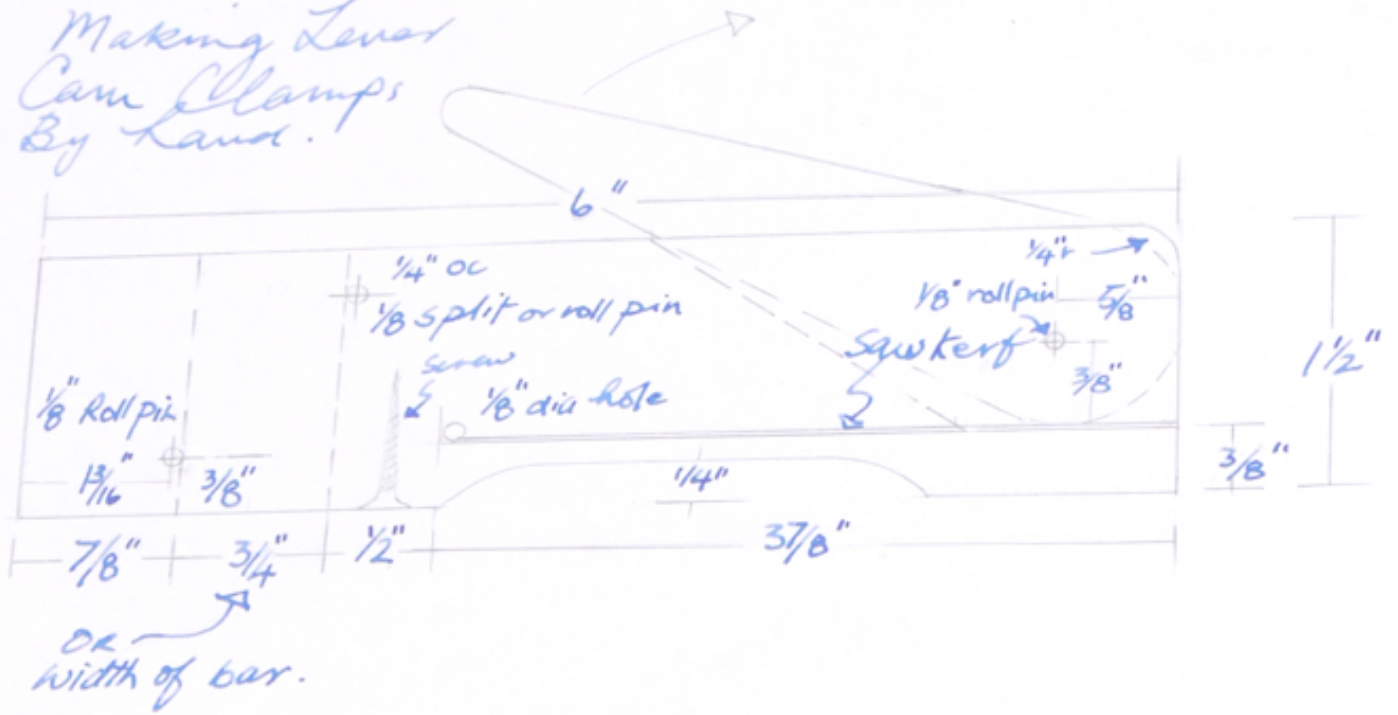